

Contents

English 01-10
 Deutsch 11-20
 Français 21-30
 Español 31-40
 Italiano 41-50
 日本語 51-60

说明书尺寸：90x120mm
 材质：105g铜版纸
 印刷：单黑
 装订方式：骑马钉
 目录页与封面页背面处留白

Thank you for purchasing the AUKEY DR3 Mini Dashcam Camera. Please read the user manual carefully and keep it for future reference. It provides you assistance in case you have any question about your product model number and Amazon order number.

Package Contents
 1x AUKEY DR3 Mini Dashcam Camera
 1x Car Charger with 4Pin USB Mini-A Cable
 1x USB Mini-A to USB-A Cable
 1x User Manual
 1x Warranty Card

Accessory
 The AUKEY DR3 GPS Antenna provides accurate position and speed data for the DR3 and is used to display on recorded videos. The recorded information may support your case in any driving disputes or incidents.



Specifications

Model	DR3
OS	Android
Screen	2.0" IPS
Image Sensor	OV2084 CMOS Sensor
Sound Recording	On / Off
Wide-angle lens	170°
Aperture	F2.0
Exposure Value	1/30, 1/25, 1/20, 1/15, 1/12, 1/10, 1/8
Recording Resolution	1080/1080P, 720P, 960P, 720P, 1080P, 1080P, 1080P, 1080P
Recording Modes	Loop, Motion Detection, Time-lapse, and Emergency Recording
Resolution	1080P / 1080P / 720P / 960P / 720P / 1080P / 1080P / 1080P
Gravity Sensor Sensitivity	High / Medium / Low / Off
Image Format	JPEG
Video Format	MP4
MicroSD Card	Class 10 or higher, 128GB Max
Resolution	1080P / 1080P / 720P / 960P / 720P / 1080P / 1080P / 1080P
Operating Temperature	-20°C ~ 60°C (-4°F ~ 149°F)
Material	ABS, PC, Glass
Dimensions	50 x 47 x 30mm / 1.97" x 1.85" x 1.18"
Weight	10g / 0.35oz

System LED Indicator

State	Meaning
Light on	On recording
Flashing Green	On recording
Off	Off recording

Control Buttons

Function	Function	Function
Enter Emergency Recording mode	Return to previous menu	Return to play/stop
Power (long press)	Return to previous menu	Return to play/stop
Volume Up (long press)	Volume Up	Volume Up / Rewind
Volume Down (long press)	Volume Down	Volume Down / Play/Pause
Power (short press)	Power On	Lock / Unlock / Power/Reset
OK (long press)	Enter / Confirm	Play / Pause

Using a MicroSD Card
 To power on, insert the car charger into your car's 12V socket. Then connect the included USB mini-A to USB-A cable to the rear port of the DR3. Insert a micro SD card into the micro SD card slot and format using the "Format" option in Dash Camer menu.
 The recording is not started until the micro SD card is formatted. To power off, disconnect the power cable.

Video
 AUKEY DR3 is not responsible for any damage caused to it or by it or to any other property or person. AUKEY DR3 is not responsible for any damage caused to it or by it or to any other property or person.

Time-lapse Recording
 The time-lapse recording function will not work if the micro SD card is not formatted. Each recorded file is up to 10 minutes long, with the footage being replaced when micro SD card storage is full.

Installing the Dash Camera
 For optimal performance, install the AUKEY DR3 in the back-center of your windshield, facing directly towards the road. The camera lens should be centered horizontally and vertically in the picture below.

Emergency Recording
How to Backup
 1. Press the power button to turn on the device.
 2. Press the volume up button to enter the menu.
 3. Press the volume down button to select the "Backup" option.
 4. Press the power button to confirm the backup operation.

Auto File Backup
 Once the camera is activated by a motion trigger, the device will automatically protect the current recording from being overwritten. Adjust it under available in the "Setup" menu.

Snapshot
 1. Hold down the power button for 3 seconds to take a snapshot while in recording mode.
 2. The snapshot file will be saved in the "Snapshot" folder in the micro SD card.
 3. The snapshot file will be overwritten if the storage is full.

Audio Recording
 1. Press the volume up button to enter the menu.
 2. Press the volume down button to select the "Audio" option.
 3. Press the power button to confirm the audio recording operation.

Viewing Photos and Videos
 1. Press the power button to turn on the device.
 2. Press the volume up button to enter the menu.
 3. Press the volume down button to select the "View" option.
 4. Press the power button to confirm the viewing operation.

Deleting and Locking/Unlocking Photos and Videos
 1. Press the power button to turn on the device.
 2. Press the volume up button to enter the menu.
 3. Press the volume down button to select the "Delete" option.
 4. Press the power button to confirm the deletion operation.

File Transfer
 1. Connect the dash camera (with car cradle) to your computer using the USB mini-A data cable.
 2. The camera will be recognized as a removable device (with a USB drive icon) on your computer.
 3. Copy the files to your computer.

Warranty & Customer Support
 For questions, support or warranty claims, contact us at the address below. Our company, your region. Please include your Amazon order number and product model number.


Amazon US orders: support@aukey.com
Amazon CA orders: support.ca@aukey.com
Amazon JP orders: support.jp@aukey.com

Product Care & Use
 1. Keep the camera away from direct sunlight.
 2. Avoid touching the lens surface. It may be damaged with carbon dust or cleaning paper. If any dirt is difficult to remove, a non-abrasive glass cleaner may be used. Do not use carbon cleaner.
 3. Keep recording continuously for at least 10 minutes to protect against the computer or data loss caused by the SD card issue.

Votre Dash Cam se trouve à l'arrière du tableau de bord de votre véhicule. Veuillez lire attentivement le manuel d'utilisation et conservez-le pour référence future. Le manuel d'utilisation vous aide à résoudre les problèmes de votre produit et à contacter le service client. Veuillez inclure votre numéro de commande Amazon et le numéro de modèle de votre produit.

Lieferumfang
 1x AUKEY DR3 Mini Dashcam
 1x Car Charger with 4Pin USB Mini-A Kabel
 1x USB Mini-A to USB-A Kabel
 1x Benutzerhandbuch
 1x Garantiekarte

Accessories
 The GPS Antenna provides accurate position and speed data for the DR3 and is used to display on recorded videos. The recorded information may support your case in any driving disputes or incidents.

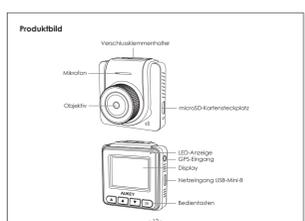

Technische Daten

Modell	DR3
OS	Android
Bildschirm	2,0" IPS
Bildsensor	OV2084 CMOS Sensor
Objektiv	170° Weitwinkelobjektiv
Blende	F2,0
Belichtungsmaß	1/30, 1/25, 1/20, 1/15, 1/12, 1/10, 1/8
Belichtungsauflösung	1080/1080P, 720P, 960P, 720P, 1080P, 1080P, 1080P, 1080P
Belichtungsmodi	Loop, Motion Detection, Time-lapse, and Emergency Recording
Belichtungsauflösung	1080P / 1080P / 720P / 960P / 720P / 1080P / 1080P / 1080P
Belichtungsauflösung	High / Medium / Low / Off
Belichtungsauflösung	JPEG
Belichtungsauflösung	MP4
Belichtungsauflösung	Class 10 or higher, 128GB Max
Belichtungsauflösung	1080P / 1080P / 720P / 960P / 720P / 1080P / 1080P / 1080P
Belichtungsauflösung	-20°C ~ 60°C (-4°F ~ 149°F)
Belichtungsauflösung	ABS, PC, Glass
Belichtungsauflösung	50 x 47 x 30mm / 1.97" x 1.85" x 1.18"
Belichtungsauflösung	10g / 0.35oz

System-LED-Anzeige

State	Meaning
Light on	On recording
Flashing Green	On recording
Off	Off recording

Bedienflächen

Function	Function	Function
Enter Emergency Recording mode	Return to previous menu	Return to play/stop
Power (long press)	Return to previous menu	Return to play/stop
Volume Up (long press)	Volume Up	Volume Up / Rewind
Volume Down (long press)	Volume Down	Volume Down / Play/Pause
Power (short press)	Power On	Lock / Unlock / Power/Reset
OK (long press)	Enter / Confirm	Play / Pause

Verwendung einer microSD-Karte
 Um die Kamera zu betreiben, stecken Sie das Autoladegerät mit der 12V-Buchse Ihres Wagens, Anschließbar verbindet Sie das Videogerät (DR3) mit dem Autoladegerät und mit dem Mini-A-Anschluss der DR3. Setzen Sie eine microSD-Karte in den microSD-Kartenslot ein und formatieren Sie die Karte mit der "Format"-Option im Dash-Camer-Menü.
 Die Aufnahme beginnt erst, nachdem die microSD-Karte formatiert ist. Um das Aufnahmegerät auszuschalten, trennen Sie das Autoladegerät von der Kamera. Um das Aufnahmegerät auszuschalten, trennen Sie das Autoladegerät von der Kamera.

Video
 AUKEY DR3 ist nicht verantwortlich für Schäden an der Kamera oder für Schäden an anderen Eigentümern oder Sachen. AUKEY DR3 ist nicht verantwortlich für Schäden an der Kamera oder für Schäden an anderen Eigentümern oder Sachen.

Time-lapse Recording
 Die Time-lapse-Funktion funktioniert nicht, wenn die microSD-Karte nicht formatiert ist. Jedes aufgezeichnete Video hat eine maximale Länge von 10 Minuten. Wenn die Speicherplatz der microSD-Karte voll ist, wird das Video durch ein neues Video ersetzt.

Installation der Dashcam
 Für die optimale Leistung, montieren Sie die AUKEY DR3 in der oberen Mitte Ihres Windschildes, so dass die Kamera direkt nach vorne zeigt. Die Kameraoptik sollte horizontal und vertikal in der Mitte des Bildschirms positioniert sein.

Emergency Recording
How to Backup
 1. Press the power button to turn on the device.
 2. Press the volume up button to enter the menu.
 3. Press the volume down button to select the "Backup" option.
 4. Press the power button to confirm the backup operation.

Auto File Backup
 Once the camera is activated by a motion trigger, the device will automatically protect the current recording from being overwritten. Adjust it under available in the "Setup" menu.

Snapshot
 1. Hold down the power button for 3 seconds to take a snapshot while in recording mode.
 2. The snapshot file will be saved in the "Snapshot" folder in the micro SD card.
 3. The snapshot file will be overwritten if the storage is full.

Audio Recording
 1. Press the volume up button to enter the menu.
 2. Press the volume down button to select the "Audio" option.
 3. Press the power button to confirm the audio recording operation.

Viewing Photos and Videos
 1. Press the power button to turn on the device.
 2. Press the volume up button to enter the menu.
 3. Press the volume down button to select the "View" option.
 4. Press the power button to confirm the viewing operation.

Deleting and Locking/Unlocking Photos and Videos
 1. Press the power button to turn on the device.
 2. Press the volume up button to enter the menu.
 3. Press the volume down button to select the "Delete" option.
 4. Press the power button to confirm the deletion operation.

File Transfer
 1. Connect the dash camera (with car cradle) to your computer using the USB mini-A data cable.
 2. The camera will be recognized as a removable device (with a USB drive icon) on your computer.
 3. Copy the files to your computer.

Warranty & Customer Support
 For questions, support or warranty claims, contact us at the address below. Our company, your region. Please include your Amazon order number and product model number.

Amazon US orders: support@aukey.com
Amazon CA orders: support.ca@aukey.com
Amazon JP orders: support.jp@aukey.com

Product Care & Use
 1. Keep the camera away from direct sunlight.
 2. Avoid touching the lens surface. It may be damaged with carbon dust or cleaning paper. If any dirt is difficult to remove, a non-abrasive glass cleaner may be used. Do not use carbon cleaner.
 3. Keep recording continuously for at least 10 minutes to protect against the computer or data loss caused by the SD card issue.

MicroSD Card File Transfer
 1. Connect the dash camera (with car cradle) to your computer using the USB mini-A data cable.
 2. The camera will be recognized as a removable device (with a USB drive icon) on your computer.
 3. Copy the files to your computer.


Warranty & Customer Support
 For questions, support or warranty claims, contact us at the address below. Our company, your region. Please include your Amazon order number and product model number.

Amazon US orders: support@aukey.com
Amazon CA orders: support.ca@aukey.com
Amazon JP orders: support.jp@aukey.com

Il est recommandé de lire attentivement le manuel d'utilisation et de le conserver pour référence future. Le manuel d'utilisation vous aide à résoudre les problèmes de votre produit et à contacter le service client. Veuillez inclure votre numéro de commande Amazon et le numéro de modèle de votre produit.

Contenu de la boîte
 1x AUKEY DR3 Mini Dashcam
 1x Car Charger with 4Pin USB Mini-A Cable
 1x USB Mini-A to USB-A Cable
 1x Benutzerhandbuch
 1x Garantiekarte

Accessories
 The GPS Antenna provides accurate position and speed data for the DR3 and is used to display on recorded videos. The recorded information may support your case in any driving disputes or incidents.

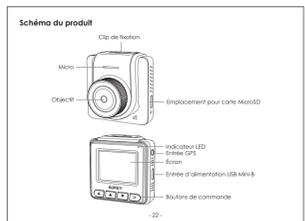

Caratteristiche

Modello	DR3
OS	Android
Processore	OV2084
Sensore Immagine	OV2084 CMOS Sensor
Obiettivo	170°
Apertura	F2.0
Velocità esposizione	1/30, 1/25, 1/20, 1/15, 1/12, 1/10, 1/8
Modalità registrazione	Loop, Motion Detection, Time-lapse, and Emergency Recording
Modalità registrazione	1080/1080P, 720P, 960P, 720P, 1080P, 1080P, 1080P, 1080P
Modalità registrazione	High / Medium / Low / Off
Modalità registrazione	JPEG
Modalità registrazione	MP4
Modalità registrazione	Class 10 or higher, 128GB Max
Modalità registrazione	1080P / 1080P / 720P / 960P / 720P / 1080P / 1080P / 1080P
Modalità registrazione	-20°C ~ 60°C (-4°F ~ 149°F)
Modalità registrazione	ABS, PC, Glass
Modalità registrazione	50 x 47 x 30mm / 1.97" x 1.85" x 1.18"
Modalità registrazione	10g / 0.35oz

féonnel LED du système

State	Meaning
Light on	On recording
Flashing Green	On recording
Off	Off recording

Boutons de commande

Function	Function	Function
Enter Emergency Recording mode	Return to previous menu	Return to play/stop
Power (long press)	Return to previous menu	Return to play/stop
Volume Up (long press)	Volume Up	Volume Up / Rewind
Volume Down (long press)	Volume Down	Volume Down / Play/Pause
Power (short press)	Power On	Lock / Unlock / Power/Reset
OK (long press)	Enter / Confirm	Play / Pause

Utilisation d'une carte microSD
 Pour fonctionner, insérez le chargeur de voiture dans le port de 12V de votre voiture, puis connectez la caméra à l'alimentation USB mini-A de votre voiture. Insérez une carte microSD dans le slot de la caméra et formatez-la à l'aide de l'option "Formater" dans le menu "Dash Cam".
 La caméra ne commencera à enregistrer qu'après que la carte microSD aura été formatée. Pour éteindre la caméra, déconnectez le chargeur de voiture de la caméra.

Video
 AUKEY DR3 n'est pas responsable des dommages causés à l'appareil ou par l'appareil à un autre bien ou à une personne.

Enregistrement en boucle
 La fonction d'enregistrement en boucle ne fonctionnera pas si la carte microSD n'est pas formatée. Chaque fichier enregistré a une durée maximale de 10 minutes. Lorsque l'espace de stockage de la carte microSD est plein, le fichier sera remplacé par un nouveau fichier.

Installation de la Dash Camera
 Pour les meilleures performances, installez la caméra AUKEY DR3 dans le centre supérieur du pare-brise, de sorte que la caméra soit directement orientée vers l'avant.

Emergency Recording
How to Backup
 1. Press the power button to turn on the device.
 2. Press the volume up button to enter the menu.
 3. Press the volume down button to select the "Backup" option.
 4. Press the power button to confirm the backup operation.

Auto File Backup
 Once the camera is activated by a motion trigger, the device will automatically protect the current recording from being overwritten. Adjust it under available in the "Setup" menu.

Snapshot
 1. Hold down the power button for 3 seconds to take a snapshot while in recording mode.
 2. The snapshot file will be saved in the "Snapshot" folder in the micro SD card.
 3. The snapshot file will be overwritten if the storage is full.

Audio Recording
 1. Press the volume up button to enter the menu.
 2. Press the volume down button to select the "Audio" option.
 3. Press the power button to confirm the audio recording operation.

Viewing Photos and Videos
 1. Press the power button to turn on the device.
 2. Press the volume up button to enter the menu.
 3. Press the volume down button to select the "View" option.
 4. Press the power button to confirm the viewing operation.

Deleting and Locking/Unlocking Photos and Videos
 1. Press the power button to turn on the device.
 2. Press the volume up button to enter the menu.
 3. Press the volume down button to select the "Delete" option.
 4. Press the power button to confirm the deletion operation.

File Transfer
 1. Connect the dash camera (with car cradle) to your computer using the USB mini-A data cable.
 2. The camera will be recognized as a removable device (with a USB drive icon) on your computer.
 3. Copy the files to your computer.

Warranty & Customer Support
 For questions, support or warranty claims, contact us at the address below. Our company, your region. Please include your Amazon order number and product model number.

Amazon US orders: support@aukey.com
Amazon CA orders: support.ca@aukey.com
Amazon JP orders: support.jp@aukey.com

Product Care & Use
 1. Keep the camera away from direct sunlight.
 2. Avoid touching the lens surface. It may be damaged with carbon dust or cleaning paper. If any dirt is difficult to remove, a non-abrasive glass cleaner may be used. Do not use carbon cleaner.
 3. Keep recording continuously for at least 10 minutes to protect against the computer or data loss caused by the SD card issue.

Transferir archivos de tarjeta microSD
 1. Conecte la cámara (con el soporte) a su computadora usando el cable USB mini-A de datos.
 2. La cámara será reconocida como un dispositivo extraíble (con un icono de unidad USB) en su computadora.
 3. Copie los archivos a su computadora.

Warranty & Customer Support
 For questions, support or warranty claims, contact us at the address below. Our company, your region. Please include your Amazon order number and product model number.

Amazon US orders: support@aukey.com
Amazon CA orders: support.ca@aukey.com
Amazon JP orders: support.jp@aukey.com

Garantía y atención al cliente
 Para preguntas, soporte o reclamos de garantía, contáctenos en la dirección que aparece a continuación. Incluya el número de su pedido Amazon y el número de modelo de su producto.

Amazon US orders: support@aukey.com
Amazon CA orders: support.ca@aukey.com
Amazon JP orders: support.jp@aukey.com

Il est recommandé de lire attentivement le manuel d'utilisation et de le conserver pour référence future. Le manuel d'utilisation vous aide à résoudre les problèmes de votre produit et à contacter le service client. Veuillez inclure votre numéro de commande Amazon et le numéro de modèle de votre produit.

Contenu de la boîte
 1x AUKEY DR3 Mini Dashcam
 1x Car Charger with 4Pin USB Mini-A Cable
 1x USB Mini-A to USB-A Cable
 1x Benutzerhandbuch
 1x Garantiekarte

Accessories
 The GPS Antenna provides accurate position and speed data for the DR3 and is used to display on recorded videos. The recorded information may support your case in any driving disputes or incidents.



Specificazioni

Modello	DR3
OS	Android
Processore	OV2084
Sensore Immagine	OV2084 CMOS Sensor
Obiettivo	170°
Apertura	F2.0
Velocità esposizione	1/30, 1/25, 1/20, 1/15, 1/12, 1/10, 1/8
Modalità registrazione	Loop, Motion Detection, Time-lapse, and Emergency Recording
Modalità registrazione	1080/1080P, 720P, 960P, 720P, 1080P, 1080P, 1080P, 1080P
Modalità registrazione	High / Medium / Low / Off
Modalità registrazione	JPEG
Modalità registrazione	MP4
Modalità registrazione	Class 10 or higher, 128GB Max
Modalità registrazione	1080P / 1080P / 720P / 960P / 720P / 1080P / 1080P / 1080P
Modalità registrazione	-20°C ~ 60°C (-4°F ~ 149°F)
Modalità registrazione	ABS, PC, Glass
Modalità registrazione	50 x 47 x 30mm / 1.97" x 1.85" x 1.18"
Modalità registrazione	10g / 0.35oz

Indicador LED del sistema

State	Meaning
Light on	On recording
Flashing Green	On recording
Off	Off recording

Botones de control

Function	Function	Function
Enter Emergency Recording mode	Return to previous menu	Return to play/stop
Power (long press)	Return to previous menu	Return to play/stop
Volume Up (long press)	Volume Up	Volume Up / Rewind
Volume Down (long press)	Volume Down	Volume Down / Play/Pause
Power (short press)	Power On	Lock / Unlock / Power/Reset
OK (long press)	Enter / Confirm	Play / Pause

Use of a tarjeta microSD
 Para funcionar, insérese el cargador de coche en el puerto de 12V de su coche, luego conecte la cámara a la alimentación USB mini-A de su coche. Insértela una tarjeta microSD en el slot de la cámara y formátele usando la opción "Formatear" en el menú "Dash Cam".
 La cámara no comenzará a grabar hasta que la tarjeta microSD se haya formateado. Para apagar la cámara, desconecte el cargador de coche de la cámara.

Video
 AUKEY DR3 no es responsable de ningún daño causado al equipo o al equipo de un tercero.

Grabación de video
 La función de grabación en bucle no funcionará si la tarjeta microSD no está formateada. Cada archivo grabado tiene una duración máxima de 10 minutos. Cuando el espacio de almacenamiento de la tarjeta microSD está lleno, el archivo será reemplazado por un nuevo archivo.

Instalación de la Dash Cam
 Para el mejor rendimiento, instale la cámara AUKEY DR3 en el centro superior del parabrisas, de modo que la cámara esté directamente orientada hacia adelante.

Emergency Recording
How to Backup
 1. Press the power button to turn on the device.
 2. Press the volume up button to enter the menu.
 3. Press the volume down button to select the "Backup" option.
 4. Press the power button to confirm the backup operation.

Auto File Backup
 Once the camera is activated by a motion trigger, the device will automatically protect the current recording from being overwritten. Adjust it under available in the "Setup" menu.

Snapshot
 1. Hold down the power button for 3 seconds to take a snapshot while in recording mode.
 2. The snapshot file will be saved in the "Snapshot" folder in the micro SD card.
 3. The snapshot file will be overwritten if the storage is full.

Audio Recording
 1. Press the volume up button to enter the menu.
 2. Press the volume down button to select the "Audio" option.
 3. Press the power button to confirm the audio recording operation.

Viewing Photos and Videos
 1. Press the power button to turn on the device.
 2. Press the volume up button to enter the menu.
 3. Press the volume down button to select the "View" option.
 4. Press the power button to confirm the viewing operation.

Deleting and Locking/Unlocking Photos and Videos
 1. Press the power button to turn on the device.
 2. Press the volume up button to enter the menu.
 3. Press the volume down button to select the "Delete" option.
 4. Press the power button to confirm the deletion operation.

File Transfer
 1. Connect the dash camera (with car cradle) to your computer using the USB mini-A data cable.
 2. The camera will be recognized as a removable device (with a USB drive icon) on your computer.
 3. Copy the files to your computer.

Warranty & Customer Support
 For questions, support or warranty claims, contact us at the address below. Our company, your region. Please include your Amazon order number and product model number.

Amazon US orders: support@aukey.com
Amazon CA orders: support.ca@aukey.com
Amazon JP orders: support.jp@aukey.com

Product Care & Use
 1. Keep the camera away from direct sunlight.
 2. Avoid touching the lens surface. It may be damaged with carbon dust or cleaning paper. If any dirt is difficult to remove, a non-abrasive glass cleaner may be used. Do not use carbon cleaner.
 3. Keep recording continuously for at least 10 minutes to protect against the computer or data loss caused by the SD card issue.

Transferencia de archivos de tarjeta microSD
 1. Conecte la cámara (con el soporte) a su computadora usando el cable USB mini-A de datos.
 2. La cámara será reconocida como un dispositivo extraíble (con un icono de unidad USB) en su computadora.
 3. Copie los archivos a su computadora.

Warranty & Customer Support
 For questions, support or warranty claims, contact us at the address below. Our company, your region. Please include your Amazon order number and product model number.

Amazon US orders: support@aukey.com
Amazon CA orders: support.ca@aukey.com
Amazon JP orders: support.jp@aukey.com

Garantía y atención al cliente
 Para preguntas, soporte o reclamos de garantía, contáctenos en la dirección que aparece a continuación. Incluya el número de su pedido Amazon y el número de modelo de su producto.

Amazon US orders: support@aukey.com
Amazon CA orders: support.ca@aukey.com
Amazon JP orders: support.jp@aukey.com

Il est recommandé de lire attentivement le manuel d'utilisation et de le conserver pour référence future. Le manuel d'utilisation vous aide à résoudre les problèmes de votre produit et à contacter le service client. Veuillez inclure votre numéro de commande Amazon et le numéro de modèle de votre produit.

Contenu de la boîte
 1x AUKEY DR3 Mini Dashcam
 1x Car Charger with 4Pin USB Mini-A Cable
 1x USB Mini-A to USB-A Cable
 1x Benutzerhandbuch
 1x Garantiekarte

Accessories
 The GPS Antenna provides accurate position and speed data for the DR3 and is used to display on recorded videos. The recorded information may support your case in any driving disputes or incidents.



Specifiche

Modello	DR3
OS	Android
Processore	OV2084
Sensore Immagine	OV2084 CMOS Sensor
Obiettivo	170°
Apertura	F2.0
Velocità esposizione	1/30, 1/25, 1/20, 1/15, 1/12, 1/10, 1/8
Modalità registrazione	Loop, Motion Detection, Time-lapse, and Emergency Recording
Modalità registrazione	1080/1080P, 720P, 960P, 720P, 1080P, 1080P, 1080P, 1080P
Modalità registrazione	High / Medium / Low / Off
Modalità registrazione	JPEG
Modalità registrazione	MP4
Modalità registrazione	Class 10 or higher, 128GB Max
Modalità registrazione	1080P / 1080P / 720P / 960