




ing mode, the vacuum will stop cleaning after 2 minutes.


will not enter the forbidden area of the room.


Only available by app control, after setting the forbidden area, the robot

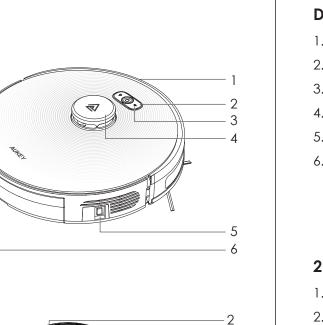


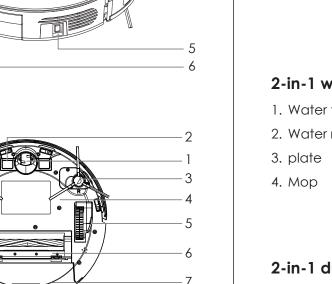


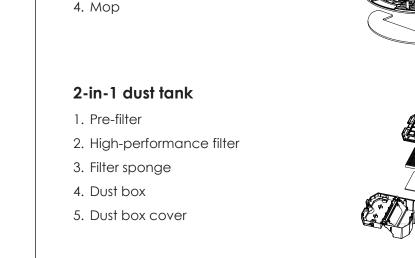

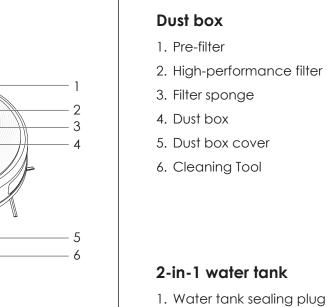


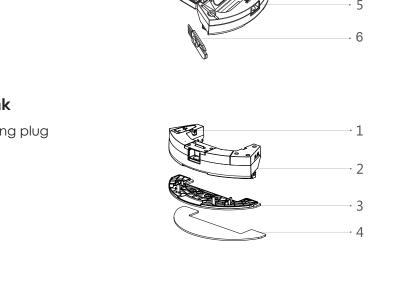

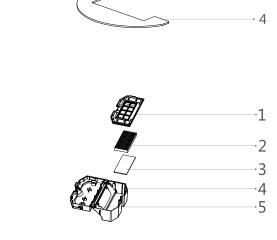

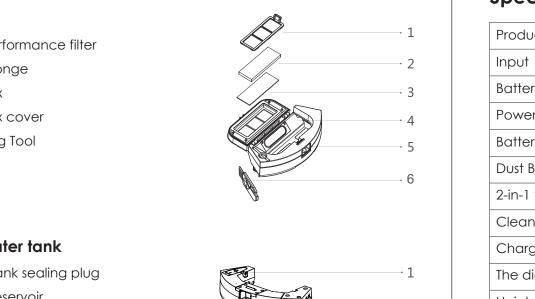

6		1001111
· ·	2-in-1 tank Capacity	270ml water tank
	Cleaning Time	Max 180mins
	Charging Time	300-360mins
1	The diameter of the main unit	345mm / 13.5"
. 2	Height of the main unit	99mm / 3.9"
_	Net weight of the main unit	3.8kg / 8.3lbs
· 3		
· 4	Safety Instructions To reduce the risk of injury or dame and keep them at hand when set	,
/ ──1	Cafab. Inchusations for I	DC 01 and Acc

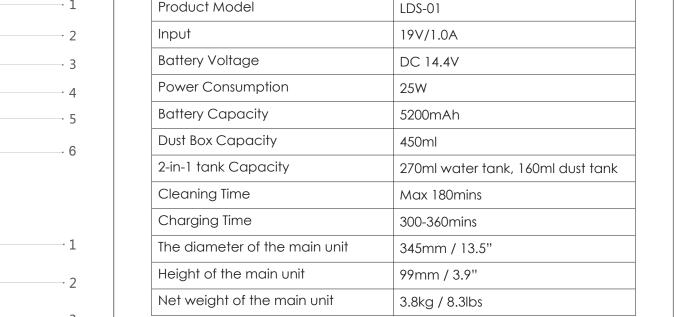

ifety instructions carefully Safety Instructions for LDS-01 and Accessories To reduce the risk of injury or damage, read these safety instructions carefully and keep them at hand when setting up, using, and maintaining this device

may be damaged or catch fire. 4. This device is not a toy. Do not sit or stand on this device. Small children and pets should be supervised when this device is operating.

5. If the metal part of the power plug is dusty, please wipe it with a dry cloth. 6. The power adapter is applied to a 100-240V AC voltage. Please plug it into 7. Do not wash or soak the main body and electronic accessories in water;

Danger otherwise, the device may be damaged by a short circuit. 8. Do not damage, load weight on, heat, pull, or bend it. 9. During cleaning pay attention to the safety of toddlers and the elderly at home to avoid tripping, and to avoid injury please do not touch the wheel and side brush. (Pay special attention if operating around toddlers) 10. This device is for indoor use only. Please do not use it outdoors. 11.Do not allow metal and conductive materials to come in contact with the battery. It may result in a short circuit.

1. Do not touch the device with wet hands, it may result in an electric shock with clean water 2. Do no place the device where it could easily fall, such as on tables, chairs, high platforms in a room, etc. long-term exposure to sunlight. 4. Do not use the device in humid environments, such as bathrooms. 5. Do not place the device near cigarette butts, lighters, or open fires. 6. Clean the product at the end of the charging. service for a long time. 8. Before using the device, please remove all vulnerable items on the floor, such as glass, lamps, and items such as wires and curtains that may

become entangled with the side brush and suction passages.

9. When the dust box is full, please empty it into the trash before using again 10.Do not use the robotic vacuum to clean construction waste 1. Do not disassemble, repair, or refit the product without authorization; oth 11.The operating temperature of the device ranges from 32°F to 104°F; please wise, it may damage the product or pose a hazard. do not use in a high-temperature environment 2. Do not use the device in an environment with a risk of fire or explosion. 3. This device is only to be used with the original power adapter; otherwise, it the vacuum unit. When you remove the battery, ensure that the device is environmental protection

1. Always use a dedicated battery adapter to avoid leakage, heating, or 2. Do not short-circuit the battery or remove the battery 3. Do not transport or preserve with necklaces, hairpins, and other metal 13. The device must be disconnected from the mains supply when removing objects. This may result in a short circuit, leakage, heating, or rupture 4. Do not burn or heat the battery as it may result in leakage, overheating, or

1. When skin or clothing is exposed to the battery, please immediately wash 2. Do not use the rechargeable battery on other devices. This battery is only suitable for the AUKEY Robotic Vacuum Cleaner 3. The device has a sophisticated design and should be protected from


3. If the battery's outer box is found to be deformed and enlarged, or there is a leakage of electrolytes, do not charge or continue to use to avoid danger. 4. Do not throw or inflict a strong impact on the battery. It may result in leakage, 5. Do not disassemble the battery pack. It may result in battery rupture and 7. Please turn off the power switch on the side of the robot when it is out of electrolyte outflow, leading to fire, explosion, and other dangers.

adult supervision

6. This device can be operated by children aged 8 years and above. Persons with reduced physical or mental capabilities, or lack of experience and knowledge, should be supervised while using the device. Instruction should be given about the safe use of this device and the hazards involved 12.Before the device is discarded as scrap, please remove the battery from


7. Children should be supervised to ensure they do not play with this device not connected to a power supply. Please recycle the battery safely for 8. Cleaning and maintenance must not be performed by children without

9. This device contains batteries that can only be replaced by skilled people do not attempt to replace it yourself 10. Only use the detachable supply unit provided with this device to recharge 11. The power supply must be removed from the socket-outlet before cleaning disposing of it. 12.The device must be disconnected from the main supply when removing 14.The battery should be disposed of safely.

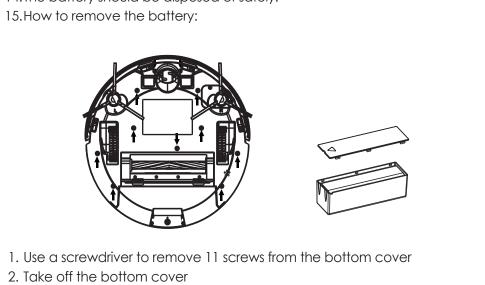


3. Unplug the connecting wire and take out the battery box component


4. Remove the battery cover, and take out the battery

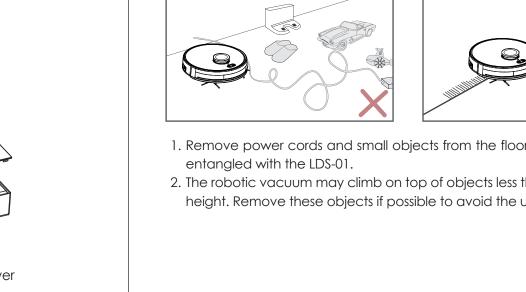



. If overheating is discovered during charging, stop using device immediately to avoid leakage, overheating, or rupture . To prolong the service life of the battery, please remove the battery and place it in a cool, dry environment if it is out of service for a long time; this will avoid leakage, heating, or rupture. . Do not soak the battery in water or let it come into contact with any liquid; otherwise, it may cause leakage, heating, or rupture. 4. Be sure to stop using it immediately in case of any problem (e.g., discoloration 3. DO NOT stand around narrow places, such as hallways and aisles as it


or deformation). to avoid leakage, heating, or rupture.

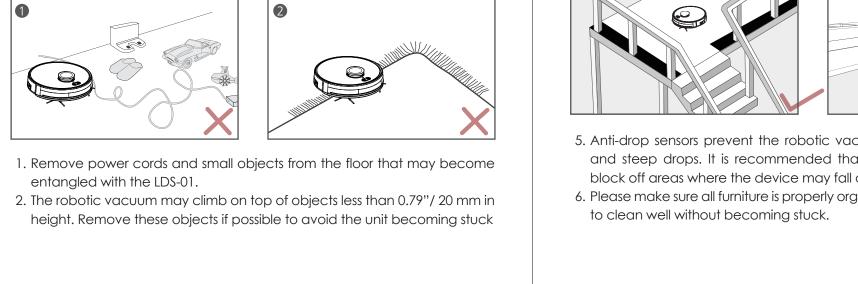


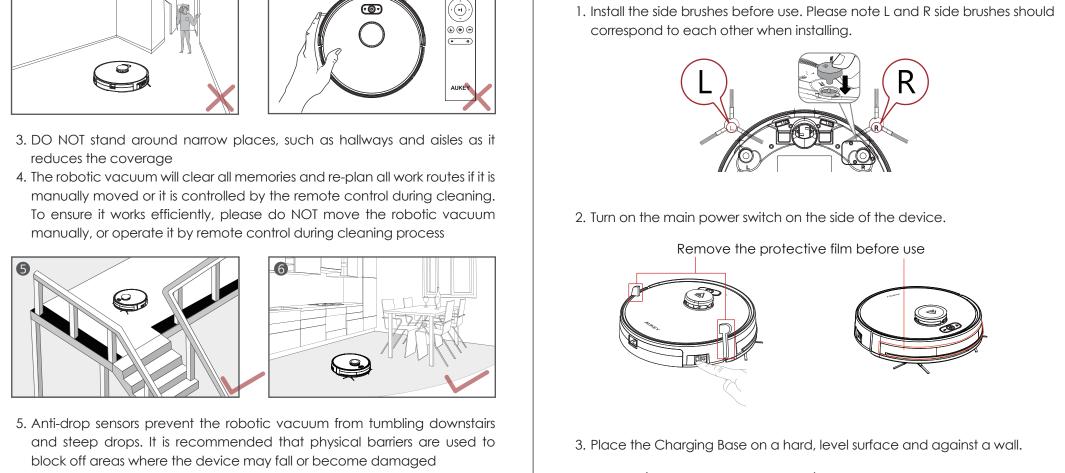


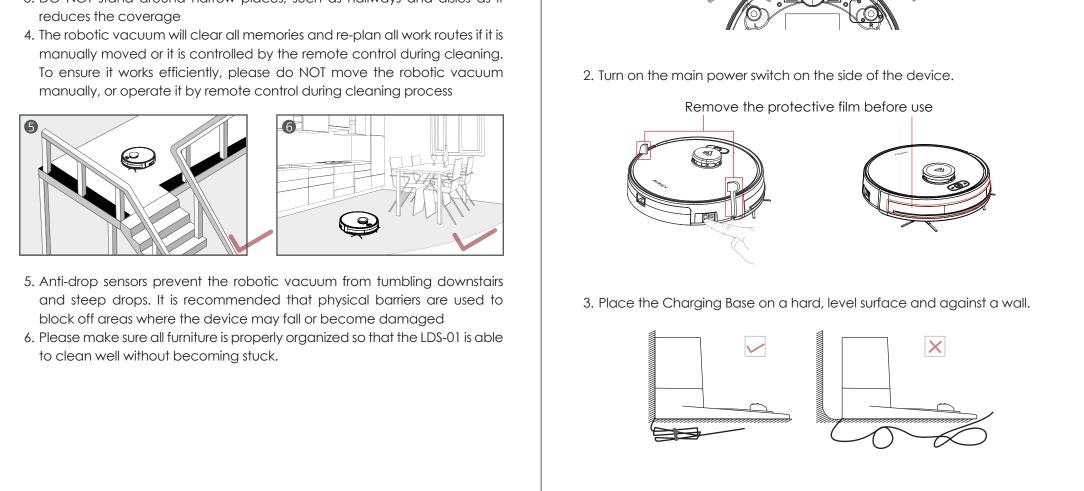

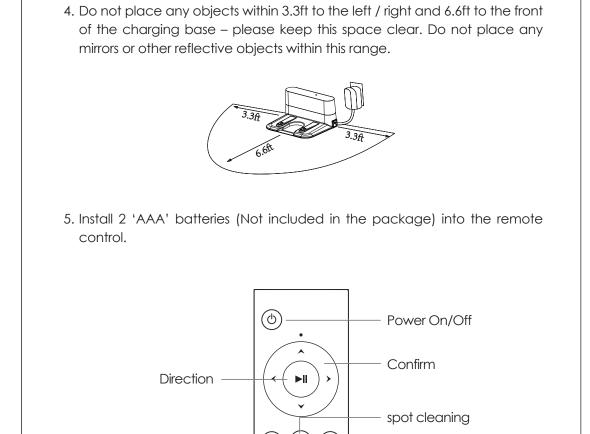


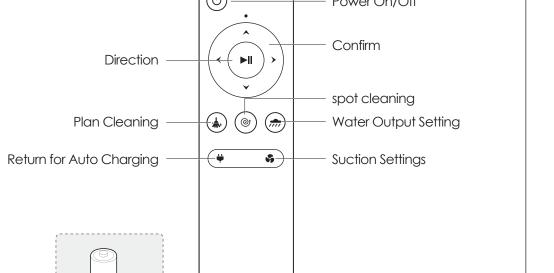


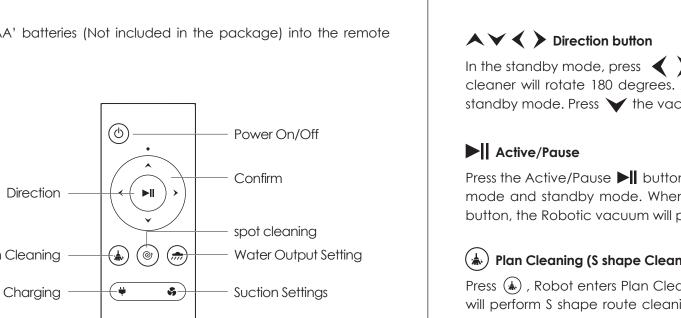


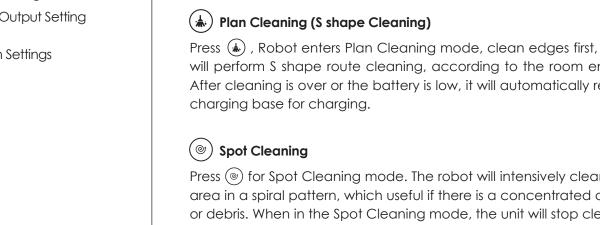


(b) Power switch

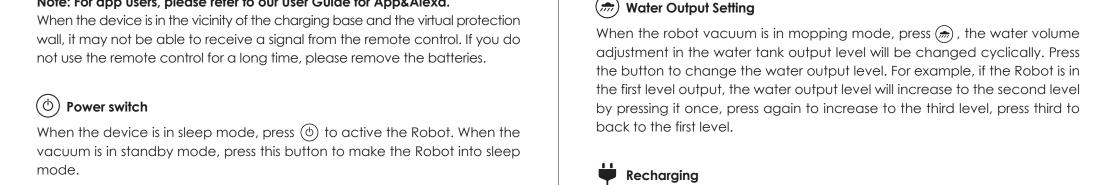

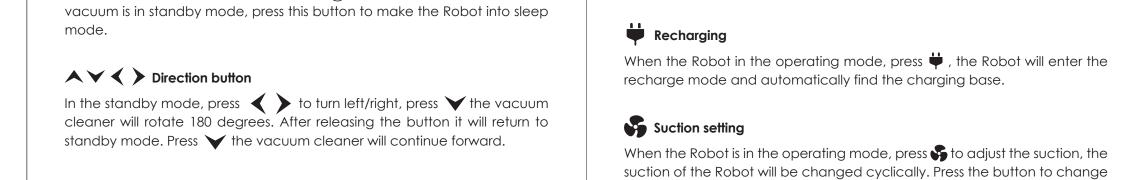


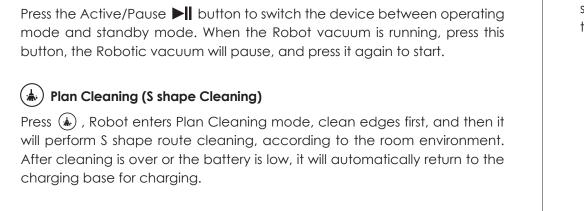

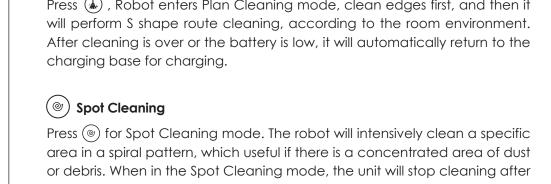

Note: For app users, please refer to our User Guide for App&Alexa.

not use the remote control for a long time, please remove the batteries

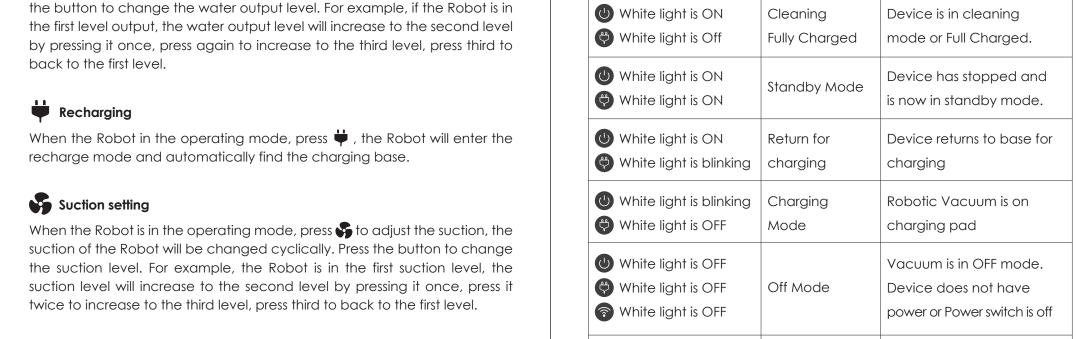



White light is blinking	charging	charging
White light is blinking White light is OFF	Charging Mode	Robotic Vacuum is on charging pad
White light is OFF White light is OFF White light is OFF	Off Mode	Vacuum is in OFF mode. Device does not have power or Power switch is off
Red light is ON White light is OFF	Error	Robotic vacuum is in an abnormal condition, needs troubleshooting.
White light is blinking	Setting Mode	The device is under setting mode and connects with APP.
White light is ON	Wi-Fi connected	Robotic vacuum has connected with Wi-Fi successfully.

LED Light Indicator Status Description


narging Modes	
thod 1: Press → on the remote control to return the robotic vacuum to charging base	
thod 2: When cleaning is completed, or the battery is too low, the device automatically find its way to the charging base. Please keep the arging base plugged-in, or the vacuum will not be able to locate the arging base	

() () () () () () () () () ()	ANNEX.

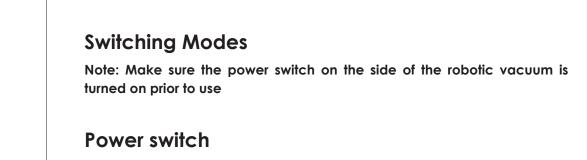

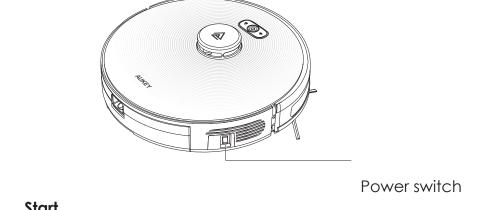


Under the standby mode, press 🕚 or 🛦 on the remote control to start the ed mode, and it can be paused by the following operations:

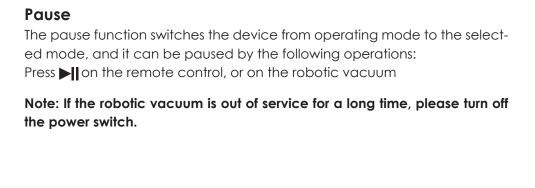





1. Plan Cleaning (S shape Cleaning) The robot will perform the cleaning plan in the S shape route according to the room environment. Click the Smart Cleaning icon () on the app, or press () on the remote control to start cleaning in Smart Cleaning mode.


The robotic vacuum intensively cleans a specific area in a spiral pattern – useful if there's a concentrated area of dust or debris. When in Spot Clean-

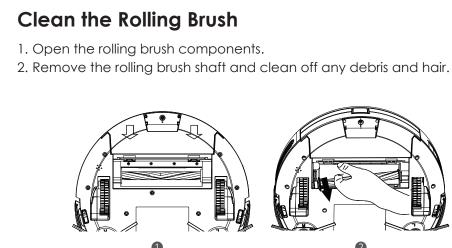

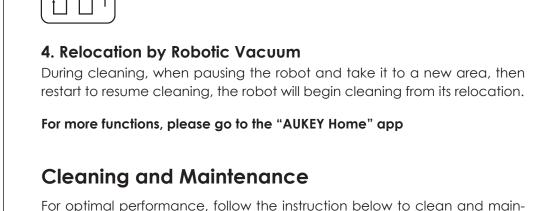




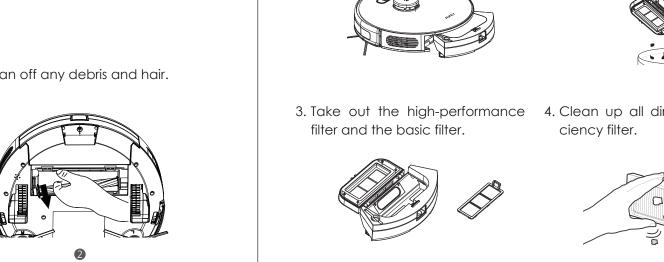


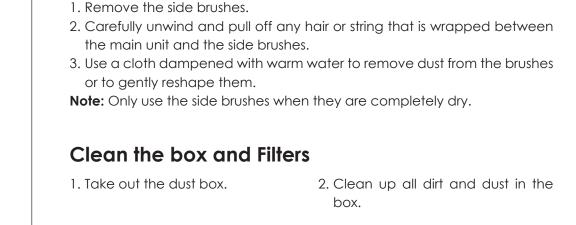







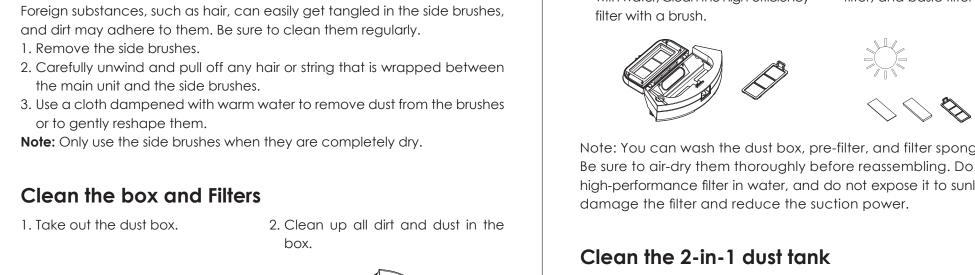


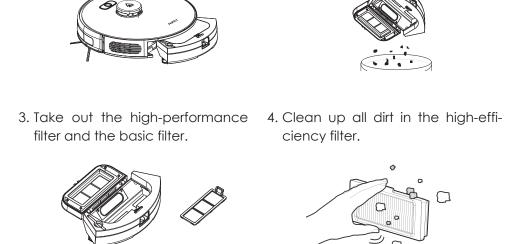


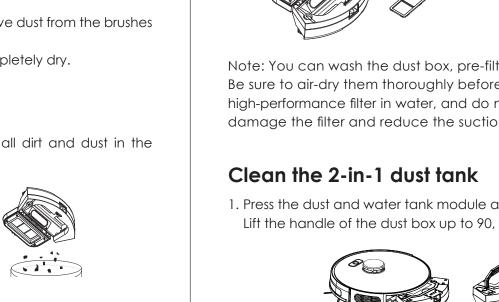


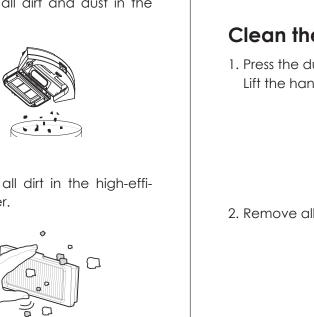





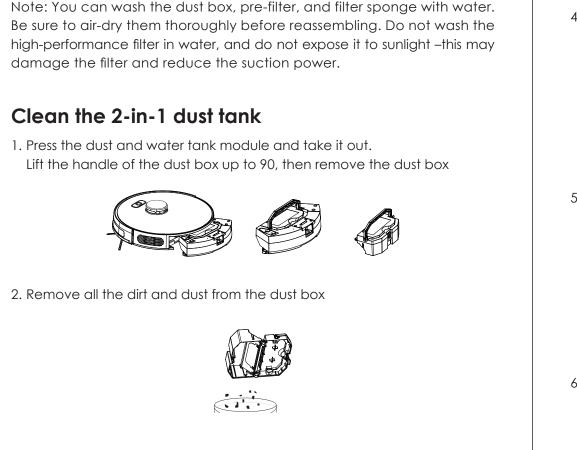


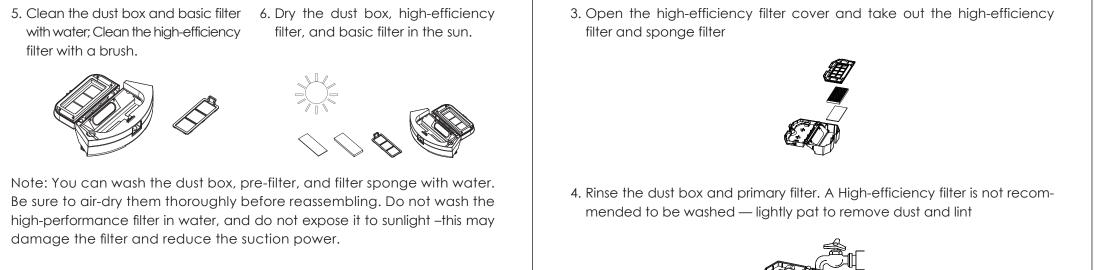


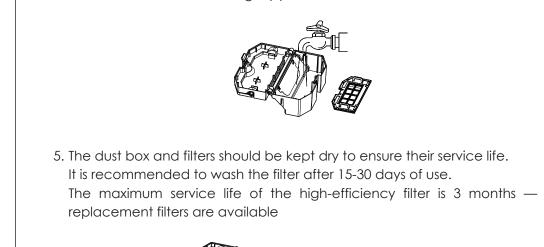


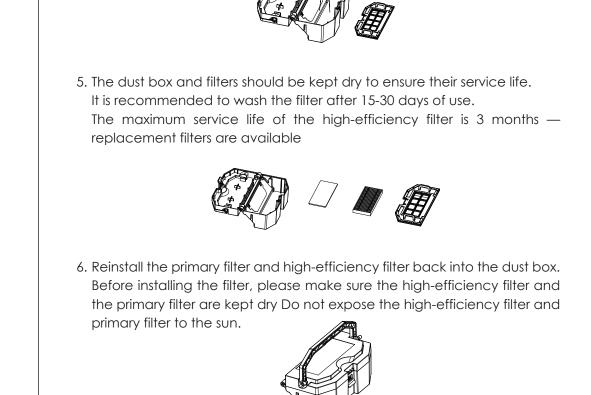


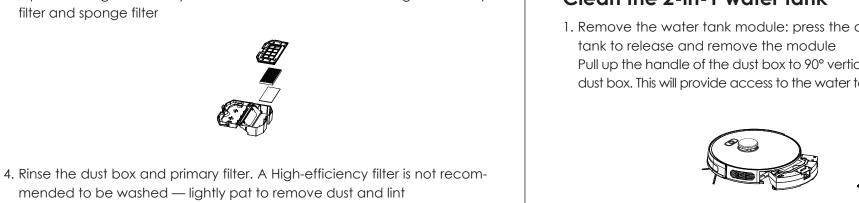


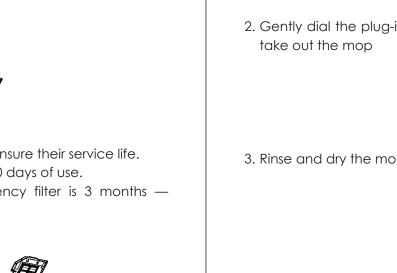

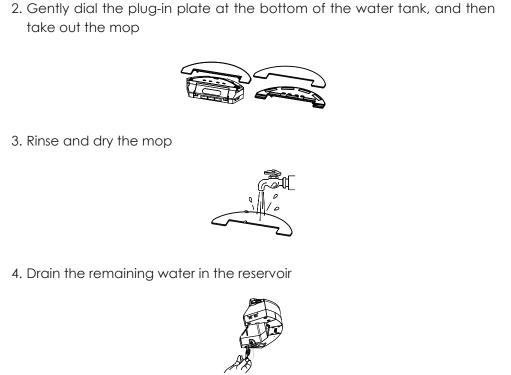


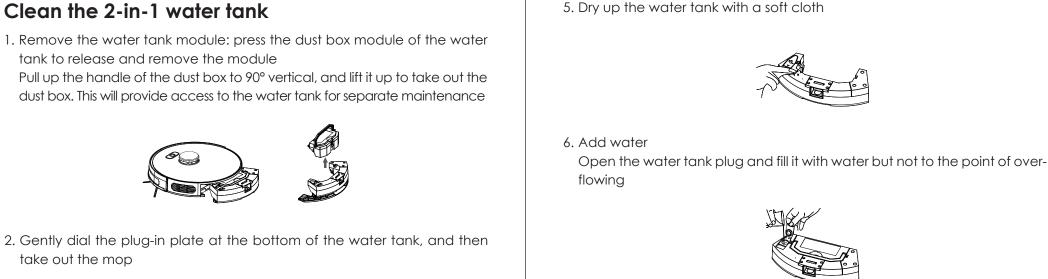


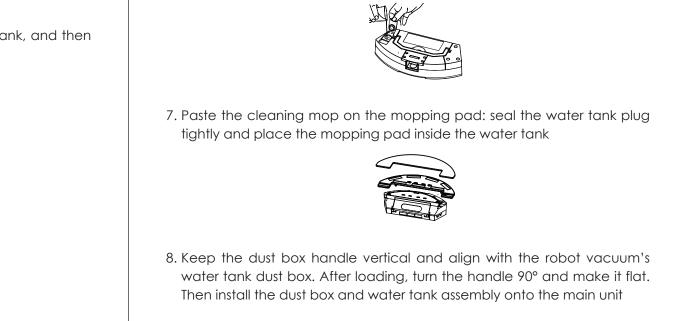


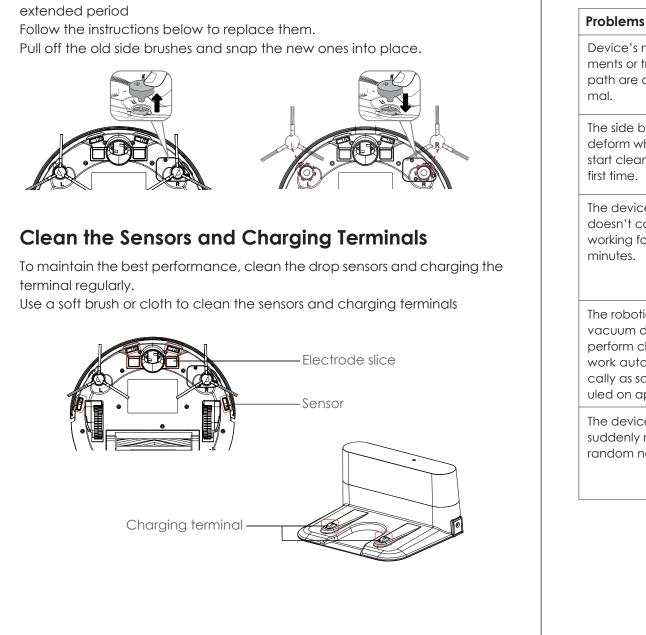



Replace the Side Brushes

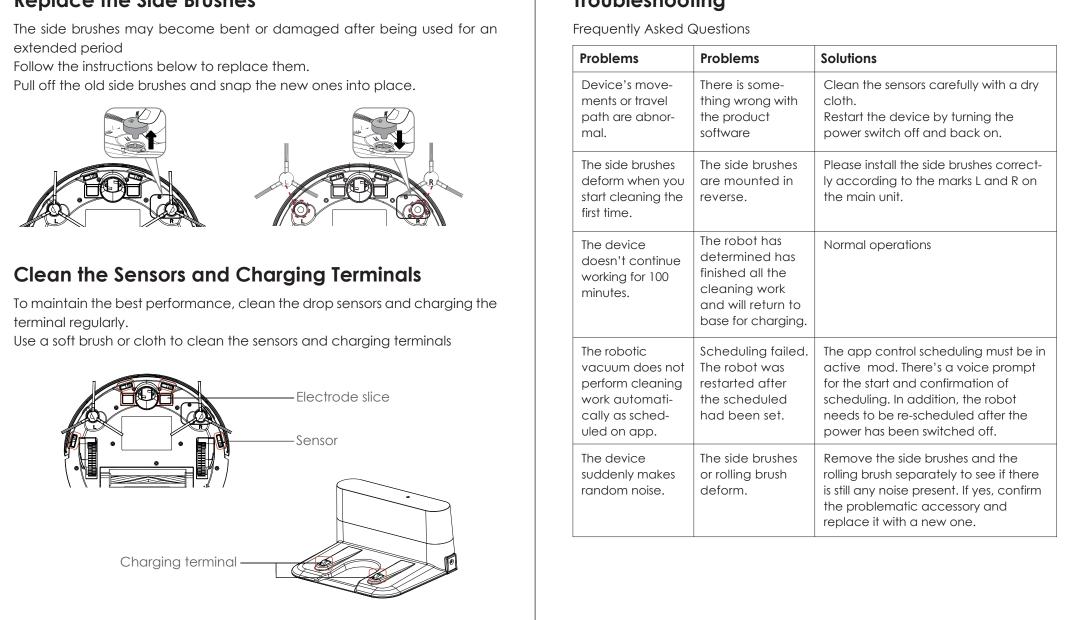

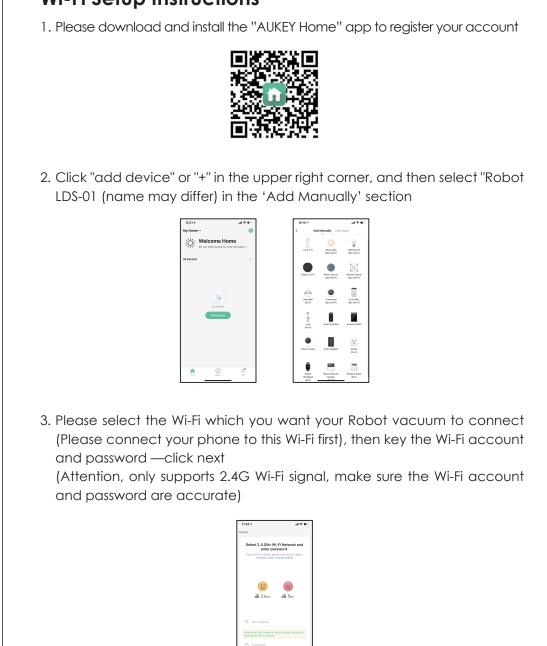

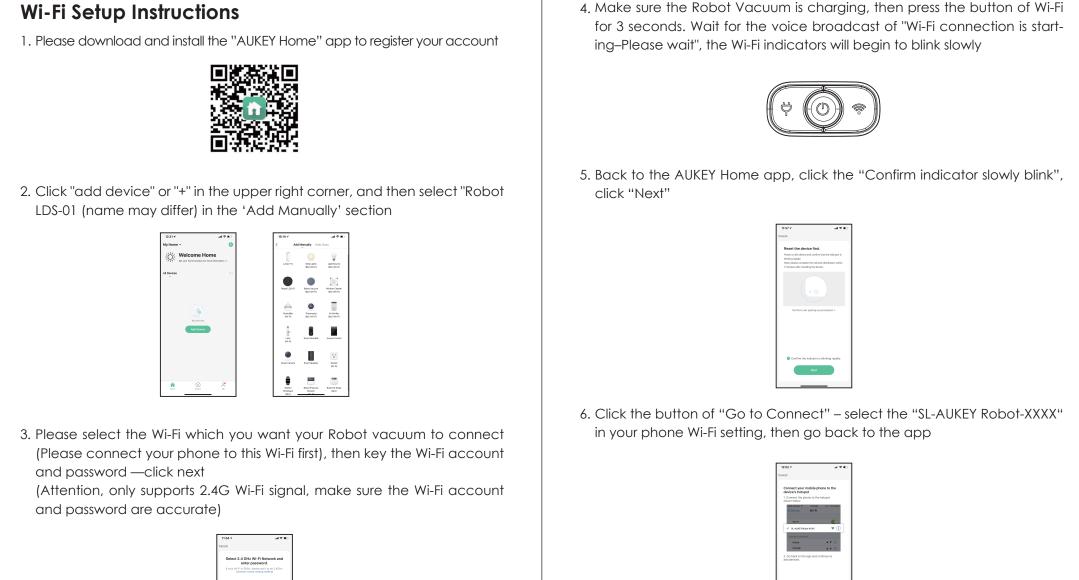

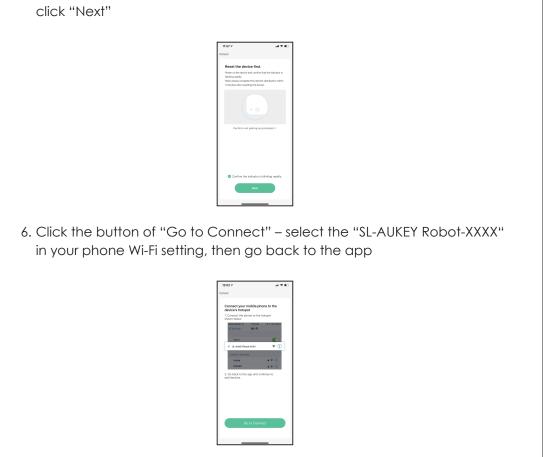

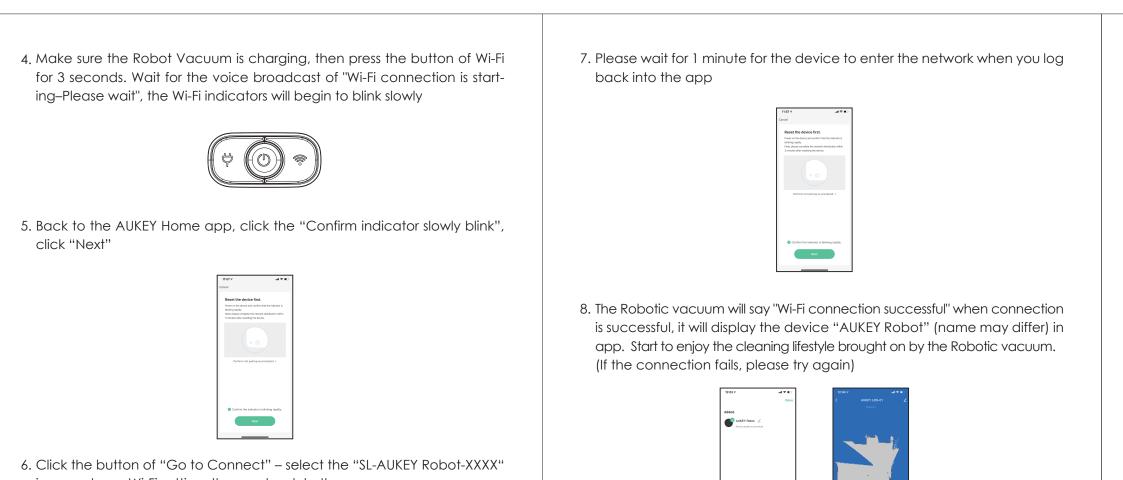

terefolen Fascian Execute Desper

